

# EVOSONIC 1000

## Ultrasonic Cleaning System

A 950-litre single-chamber aqueous ultrasonic cleaning system with a motorised lid, integrated dual-stage filtration and full Siemens PLC control from a 7" touch screen — with secure remote support access. Supplied and supported by Kleentek Australia.

Model EVS 950

950 L - SS 316 process tank

25 kHz ultrasonics

Motorised lid & auto-fill

7" Siemens touch HMI

eWON remote access



### HOW TO USE THIS MANUAL

## Important — Read Before Operation

This manual covers the **control software, operation, process and servicing** of your Kleentek Australia EVOSONIC 1000 (model **EVS 950**) ultrasonic cleaning system. It documents the touch-screen interface (MMI), the cleaning and maintenance programs, the process start conditions, the tower-lamp status indications, the alarm list and the routine servicing requirements.

The instructions should be carefully studied by machine operators and service mechanics before the machine is operated. Operators should be familiar with Sections 1–3 and 6–7 before running a cycle; supervisors and service staff should also read Sections 2, 4, 5, 8 and 9. Keep this manual with the machine.

### SECTION 1

#### System Overview

What the machine is, how ultrasonic cleaning works, and the full technical specification.

### SECTION 2

#### Preparation for Use

Installation, filling, solution, temperature, degassing and the electrical supply.

## SECTION 3

### System Operation

Logging in, selecting a cleaning program and editing program data on the touch panel.

## SECTION 8

### Alarms & Troubleshooting

Every alarm message the system can raise, its cause and how to rectify it.

#### **i** Proprietary notice

The contents of this manual are proprietary information. No part may be transmitted, written or verbal, to any third party, or copied in any way, without the prior written consent of Kleentek Australia. All rights are reserved in respect of changes of design and technical data.

---

## Quick Start Guide

At-a-glance operation for trained operators. This is a summary only — read Sections 1–9 for full detail, safety information and troubleshooting before operating the machine.

### 1 · START OF DAY

1. Check the **bath level** — top up if low (Fill Bath, Section 4).
2. Switch on at the isolator and **log in** at your level.
3. Set the **temperature** (25–80 °C) and let the bath heat.
4. If the solution is fresh or topped up, run **Degas** with no load.

### 2 · RUN A CLEANING CYCLE

1. **Load** the basket and **close the lid**.
2. **Select** a program (1–4) on the Home screen.
3. Press the **Start** switch.
4. **Monitor** the cycle on the main screen.
5. At the end, **raise & drain** the basket, then unload.

### 3 · PAUSE / STOP / RESET

- **Stop** switch — pauses the cycle.
- **Start** again — resumes from where it stopped.
- **Hold Stop 3 s** — resets the process.

### WON'T START? CHECK

- Process-tank **level high**
- Pump & heater **feedbacks ON**
- Temp  $\leq$  set point · **RTD healthy**
- **No** surge-arrestor fault

### TOWER-LAMP STATUS

- **Green** — running, or ready to start (blinking).
  - **Orange** — paused, or maintenance / test in progress.
  - **Red + buzzer** — fault / alarm, or lid moving.
- Full legend: Section 7.

### IF AN ALARM APPEARS

1. Note the message on the **Alarms** screen (mute the buzzer there).
2. **Rectify the cause** — see the alarm table in Section 8.
3. Press the **Fault Reset** switch to clear it.

### SAFETY ESSENTIALS

- **Never run the bath dry** — heaters and resonators must always be covered by liquid.
- The **lid must be closed** for a cycle to run; keep clear of the powered lid as it moves.
- **Isolate the power** before any service or before opening a panel or filter housing.
- **No acids, halogens or flammables** in the bath — they damage the machine and create hazards.

PDF

## Quick Start Guide

Single page · print & laminate for the machine



## 1 THE EVOSONIC 1000 (EVS 950)

# System Overview

The EVOSONIC 1000 (model **EVS 950**) is a **single-chamber aqueous ultrasonic cleaning system** with integrated filtration, a power-operated lid and full PLC control. Components are cleaned in baskets lowered into a single heated process tank by the combined action of ultrasonic cavitation, heat and chemistry, while continuous filtration keeps the bath clear. The machine is largely self-contained — it needs only a three-phase electrical supply and clean water to operate — and measures approximately **2910 × 1630 × 1380 mm (L×W×H)**.

Heavy baskets are best handled with an overhead hoist; loading and unloading is then done from the hook above the tank once the powered lid has opened. All operation is from a 7" colour touch screen, and a built-in industrial router allows secure remote support and diagnostics.

## How Ultrasonic Cleaning Works

Effective ultrasonic cleaning depends on four factors working together — **cavitation, chemistry, temperature and time**. The EVS 950 brings all four to bear in a single tank:

### FACTOR 1

#### Cavitation

Up to ten 25 kHz generators drive tube resonators in the tank. The sound waves form and violently collapse microscopic bubbles throughout the solution, scrubbing every wetted surface — including blind holes and recesses a brush cannot reach.

### FACTOR 2

#### Chemistry

An aqueous detergent lifts and emulsifies oils, greases and particulate soils so the cavitation can carry them away into the filtration circuit.

### FACTOR 3

#### Temperature

A heated bath markedly increases cavitation intensity and chemical activity. The controller holds the tank at the program set point.

### FACTOR 4

#### Time

Each program sets the cleaning duration, so results are consistent and repeatable from batch to batch.

## The Cleaning Cycle

In normal use the operator selects a program and presses Start. The controller then runs the cycle automatically:

- 1 Pre-filtration** circulates and clears the bath before cleaning (time set per program).
- 2 Ultrasonic clean** runs the generators at the set power for the set cleaning time while the bath is held at temperature.
- 3 Post-filtration** polishes the bath afterwards, removing the soils just released.
- 4** The cycle ends; the operator raises the basket, lets it drain over the tank, and unloads.

See **Section 3 — System Operation** for how to select, edit and start programs, and **Section 6 — Process Overview** for the conditions that must be met before a cycle will run.

## Filtration & Bath Management

Solution overflows the process tank into a **pocket (weir) tank**, from which the filtration pump draws it through dual stainless bag-filter housings — a coarse and a fine cloth bag (**100 micron** and **50 micron**) — before returning it, clean, to the process tank. Removing particulate continuously keeps the bath clear, protects the finish on cleaned parts and extends solution life. The filter-housing pressure gauge shows when the bags are loading up and due for replacement, and the controller tracks a filter-change counter (Section 4).

## Heating & Temperature Control

Electric screw-in water heaters, each with its own controller and over-temperature limiter, bring the bath to temperature. A PT100 RTD sensor feeds the controller (through a signal isolator) for closed-loop control to the HMI set point, and an independent thermostat provides a second layer of over-temperature protection.

## Power-Operated Lid & Safety Interlocks

The tank lid is **motor-driven** (a brake-gear motor and stainless chain drive) with open, middle and close position sensors and a lid interlock. The process will not run unless the lid is correctly closed, and dedicated alarms flag a lid that fails to open or close within the expected time. Protective interlocks — low process-tank and weir-tank level, lid position, over-temperature (RTD and thermostat), surge-arrestor and emergency stop — stop the machine safely if a fault occurs.

## Controls, Monitoring & Remote Access

The machine is controlled by a **Siemens S7-1200 (CPU 1214C)** PLC with a 16-input / 16-output expansion module, operated from a **Siemens TP700 Comfort 7"** touch HMI. From the panel the operator selects programs, sets temperatures and times, monitors the tank mimic and ultrasonic generators, and reads the digital I/O. An **eWON Cosy+** industrial router provides secure remote access for support and diagnostics. A three-colour tower lamp with buzzer shows machine status at a glance (Section 7).

# Technical Specification

## Physical & mechanical specification

|                                  |                                                                                     |
|----------------------------------|-------------------------------------------------------------------------------------|
| Overall machine size (L×W×H)     | 2910 × 1630 × 1380 mm                                                               |
| Process tank — effective (L×W×H) | 1800 × 750 × 750 mm · height 1232 mm                                                |
| Tank material                    | SS 316, 3 mm                                                                        |
| Tank capacity                    | 950 litres (to overflow at 750 mm)                                                  |
| Pocket (weir) tank (L×W×H)       | 350 × 750 × 760 mm                                                                  |
| Basket — outer size (L×W×H)      | 1700 × 680 × 550 mm · up to 600 kg                                                  |
| Outer canopy / cover             | SS 304, matt buffing, coated sheet                                                  |
| Ultrasonic frequency             | 25 kHz (tube resonators, URT-25 type, 572 mm)                                       |
| Ultrasonic generators            | Advanced Cleaning Generator (ACG) type — control supports up to 10                  |
| Level switches                   | 2 × Endress+Hauser FTL31 (process & weir tanks)                                     |
| Filter housings                  | 2 × SS 304 bag-filter housing, Ø7", 16" long, 2" connection, Viton seal             |
| Filters                          | Cloth bag — 100 micron & 50 micron                                                  |
| Filtration pump                  | Grundfos CM5-2-A-R-A-V AVBV · 0.84 kW · 5 m³/h · 14.7 m head                        |
| Heaters                          | Electric screw-in, with controller & temperature limiter (JEKA)                     |
| Temperature sensor               | RTD PT100, 200 mm (Radix), via PT100→0–10 V isolator (0–100 °C)                     |
| Lid                              | Motorised — brake-gearred motor & SS-304 chain drive, position-sensed & interlocked |



## Electrical & control specification

|                             |                                                                             |
|-----------------------------|-----------------------------------------------------------------------------|
| <b>Mains supply</b>         | 3-phase 415 V + Neutral, 50 Hz                                              |
| <b>Mains protection</b>     | 63 A                                                                        |
| <b>Total connected load</b> | ≈ 39 kW · ≈ 56 A (approx.)                                                  |
| <b>Control supply</b>       | Siemens SITOP 24 V DC, 6.2 A                                                |
| <b>PLC</b>                  | Siemens S7-1200, CPU 1214C (14 DI / 10 DO / 2 AI) + 16 DI / 16 DO expansion |
| <b>Total I/O</b>            | 30 digital inputs · 26 digital outputs · 2 analog inputs                    |
| <b>Operator interface</b>   | Siemens TP700 Comfort, 7" colour touch (800 × 480)                          |
| <b>Remote access</b>        | eWON Cosy+ WiFi M2M router (WiFi & LAN)                                     |
| <b>Safety</b>               | Schmersal SRB301MC E-stop safety relay · 3-phase surge arrestor             |
| <b>Status indication</b>    | Tower lamp (red / amber / green) with buzzer                                |

### **i** About these figures

Dimensions and component selections are taken from the machine's as-built drawings and spares list (see Section 11). Minor changes may occur in final production; for the definitive electrical detail always refer to the electrical schematic supplied with this machine.

## **2** PREPARATION FOR USE

### Preparation Before Start-Up

Commissioning and day-to-day start-up should be carried out only by personnel familiar with these instructions and with the relevant work-safety and accident-prevention regulations. The steps below take the machine from installation through to a degassed, heated cleaning bath ready for production. Read this section in full before the first start-up.

## Siting & Installation

Position the machine on a firm, level floor able to carry its filled weight — the process tank alone holds **950 litres** of solution, so the unit weighs well over a tonne when full. Allow for its **2910 × 1630 mm** footprint plus working space.

- Leave clearance on all sides for the lid to open, for basket handling and for service access, and keep the ultrasonic generator cooling vents clear so warm air cannot accumulate.
- Keep the machine away from direct draughts, heat sources and heavy dust.
- Provide local fume extraction or good ventilation above the tank — a heated aqueous bath gives off water vapour and detergent mist.
- Make sure the supply isolator, the drain point and (where used) the overhead hoist are all within easy reach of the operating position.

## Filling the Bath

The bath can be filled manually through the fill ball valve or via the controller's **Fill Bath** function, which opens the auto-fill valve while you remain on that screen (Section 4). Fill with clean water until the process-tank level switch is immersed; the pocket (weir) tank then holds the working reserve that the filtration pump circulates. Where possible use softened or de-mineralised water — it reduces scale on the heaters and tank, limits spotting on finished parts, and keeps the bath clearer for longer.



### Never run the bath dry

The heaters and ultrasonic resonators must always be fully covered by liquid. The low-level switches interlock the heaters and ultrasonics, but the level should still be checked before every start-up and topped up as the bath evaporates during use.

## Preparing the Cleaning Solution

The EVS 950 runs on water plus an aqueous cleaning concentrate. Always add the concentrate *to* the water — never the other way around — and let the filtration pump circulate the bath for a few minutes to mix it thoroughly before heating.

- Use only the aqueous detergent specified for the machine, at the supplier's recommended concentration and pH. **Do not** add acidic or acid-forming additives, halogenated compounds (chlorine, fluorine, bromine or iodine), or flammable solvents — acids and halogens can pit the stainless tank and resonators, and flammables present an explosion risk.

- Check the bath concentration regularly and top up the concentrate as parts and drag-out deplete it.
- Remember that a strongly alkaline bath can attack aluminium, zinc and some light alloys — choose the concentration and contact time to suit the parts being cleaned.

## Setting the Temperature

Set the bath temperature on the HMI; the controller then heats the process tank to that set point and holds it. Warm solution cavitates far more effectively than cold, so cleaning performance improves markedly with temperature.

- Cleaning programs accept a control temperature of **25–80 °C**; the test / maintenance set point ranges **10–80 °C**.
- Allow time for the bath to reach temperature before the first cycle, and keep the lid closed during heat-up to save energy and reduce vapour.
- Do not exceed the detergent supplier's maximum temperature.

## Degassing the Bath

Fresh solution and freshly added water are saturated with dissolved air. Until that air is driven off it cushions the imploding cavitation bubbles and noticeably reduces cleaning power. Before the first production cycle — and again after any large top-up — run the dedicated **Degas** function (Section 4) on the filled, heated bath with no parts loaded, until cavitation sounds even across the tank.

## Mains Electrical Supply

The system requires a **3-phase 415 V AC, 50 Hz supply with neutral**, fed from a **63 A** protected supply; the total connected load is approximately **39 kW ( $\approx$  56 A)**. The final connection must be made by a licensed electrician in accordance with local wiring rules.

- Provide a dedicated, lockable isolator next to the machine, with appropriate over-current and earth-leakage protection.
- Confirm correct phase rotation so the filtration pump turns the right way — a centrifugal pump run in reverse gives poor flow and can be damaged.
- Verify protective-earth continuity before energising the machine.



### **Earthing is mandatory**

The machine must not be operated without proper earthing. Correct earthing is essential both for operator safety and for stable ultrasonic performance — do not energise the machine until earth continuity has been confirmed.

## **First Start-Up Sequence**

- 1** Confirm the tank is filled to the level switch and the cleaning solution is mixed to the supplier's recommended concentration.
- 2** Switch on at the isolator and log in at the required level (Section 3).
- 3** Set the required **temperature** on the HMI and allow the bath to reach the set point.
- 4** **Degas** the heated bath with no load until cavitation is even.
- 5** Re-check the concentration and temperature, then load the first basket, select a **program** and press Start — see Sections 3 and 6.



---

## **3 SYSTEM OPERATION**

### **Operating the Touch-Panel Interface (MMI)**

The EVOSONIC 1000 is controlled by a **Siemens S7-1200 (1214C DC/DC/DC)** PLC with expansion modules. The operator interface is a **7" TP700 Comfort** colour touch screen (800 × 480), which acts as both display and keyboard. The **main screen** appears automatically at power-on whenever there is no active alarm.

The main screen shows the current date and time, the process-tank temperature, the logged-in user, the selected program (if any), the lid-bypass state, the process time and any system status messages. Pressing the **Alarms** key opens the alarms screen at any time.

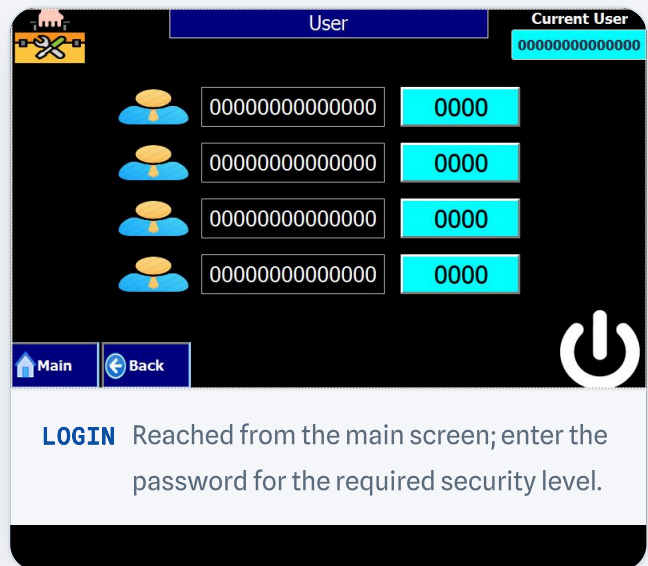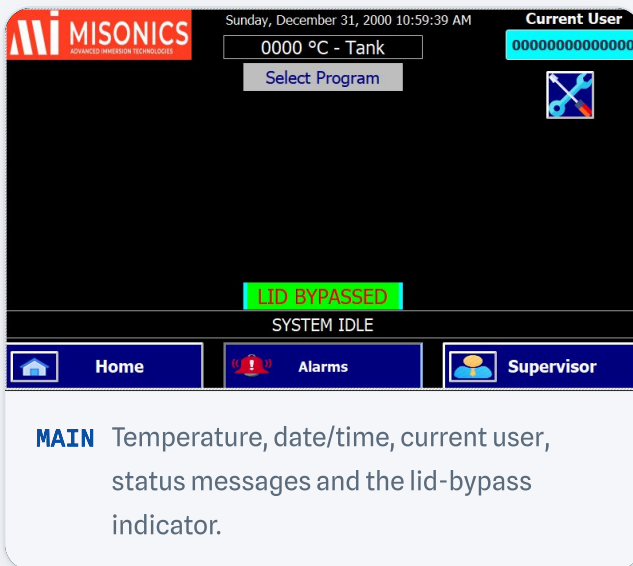

## Logging In & User Levels

The machine cannot be operated until the user has logged in at the required security level. Press the **Login** key on the main screen to open the login screen, then enter a password. If the password is correct the main screen returns and the user name is shown; menus above the user's level remain disabled.

### User security levels

| USER       | PASSWORD |
|------------|----------|
| User 1     |          |
| User 2     |          |
| User 3     |          |
| Supervisor |          |

#### **i** Passwords are issued by Kleentek

For security, login passwords are not printed in this manual. The factory passwords for each level are available to the **authorised supervisor** from Kleentek Australia. The Supervisor can then rename users and change passwords from the user-configuration screen (press the tab/key from the login screen) — change them after commissioning so that program and supervisor functions are protected.

## What Each Level Can Do

Any logged-in operator can run the machine; **configuration and set-up are restricted to the Supervisor** (the machine's administrator level). The table below summarises the difference.



| CAPABILITY                                                         | USER | SUPERVISOR |
|--------------------------------------------------------------------|------|------------|
| <b>OPERATE THE MACHINE</b>                                         |      |            |
| Log in at the required security level                              | ✓    | ✓          |
| Select a cleaning program (1-4)                                    | ✓    | ✓          |
| Start, pause, stop & reset a cycle                                 | ✓    | ✓          |
| Run fill, drain, filtration & degas functions                      | ✓    | ✓          |
| Monitor status, the tank mimic & digital I/O                       | ✓    | ✓          |
| View alarms, mute the buzzer & fault-reset                         | ✓    | ✓          |
| Adjust brightness, calibrate & clean the screen                    | ✓    | ✓          |
| <b>CONFIGURE &amp; SET UP — SUPERVISOR ONLY</b>                    |      |            |
| Edit cleaning-program data (temperature, times, power, lid)        | —    | ✓          |
| Edit maintenance-program data (day-end / degas / filtration times) | —    | ✓          |
| Set & reset the filter-change and drain counters                   | —    | ✓          |
| Configure shutdown & wake-up heating (days, times, temperature)    | —    | ✓          |
| Set the lid / heaters time-out                                     | —    | ✓          |
| Bypass ultrasonic generators (In Use / Bypass)                     | —    | ✓          |
| Set test / manual-operation values (US power, test temperature)    | —    | ✓          |
| Rename users & change passwords                                    | —    | ✓          |

### **i** Above Supervisor

Setting the system **date & time** requires a separate **factory password** (held above Supervisor level). Menus above a user's logged-in level are disabled until the correct level is entered.

## Selecting a Program

From the main screen press the **Home** key to open the program-selection screen. Tap the required **program number** (1-4) to select it; a "program selected" message confirms the choice, and the program cycle, lid and RTD-selection status can be monitored from this screen.

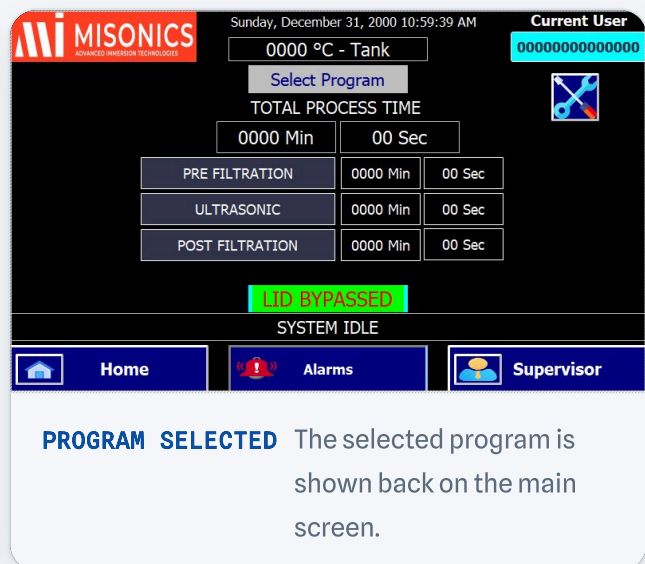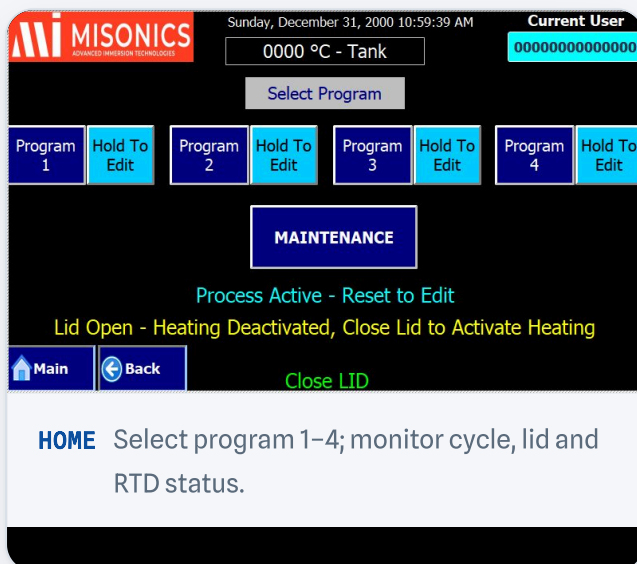

## Editing a Program

With a program selected, press and hold the **HOLD TO EDIT** button for 3 seconds to open that program's data-entry screen. Tap a value field to open the numeric keypad and enter the new value. Programs 2, 3 and 4 are selected and edited in exactly the same way.

DATA ENTRY - PROGRAM 1

PRE FILTRATION TIME

0000 Min

ULTRASONIC TIME / POWER CONTROL

0000 Min

30% ▼

POST FILTRATION TIME

0000 Min

CONTROL TEMPERATURE

0000 °C

LID

IN USE

Main

Back

**DATA ENTRY – PROGRAM 1** Pre-filtration, ultrasonic time & power, post-filtration, control temperature and lid mode.

### Program data-entry ranges

| PARAMETER                      | RANGE           |
|--------------------------------|-----------------|
| Pre-filtration time (minutes)  | 1 – 9999        |
| Ultrasonic time (minutes)      | 1 – 9999        |
| Ultrasonic power control (%)   | 30 – 100        |
| Post-filtration time (minutes) | 1 – 9999        |
| Control temperature (°C)       | 25 – 80         |
| Lid                            | In Use / Bypass |

Each cleaning program therefore runs as a sequence: a **pre-filtration** period to clear the bath, an **ultrasonic clean** at the set power and temperature, then a **post-filtration** period to polish the bath afterwards.



# Maintenance & Service Programs

Press the **Maintenance** key to open the maintenance screen. As with cleaning programs, tap a function to select it and hold its button for 3 seconds to edit its data. The cycle and lid status can be monitored from this screen.



**MAINTENANCE** Day-end maintenance, degas, filtration, fill, filter change, drain and shutdown/wake-up.

## Day-End Maintenance

Runs a filtration pass to clean up the bath at the end of the day. Holding **HOLD TO EDIT** opens its data entry. On completion it automatically triggers the shutdown & wake-up process.

- Maintenance filtration time (minutes): **1 – 9999**

## Degas

Runs the ultrasonics with no load to drive dissolved air out of fresh or topped-up solution, restoring full cavitation power.

- Ultrasonic degas time (minutes): **1 – 9999**
- Ultrasonic power (%): **30 – 100**

## Filtration

Runs the filtration pump on its own to clarify the bath between cycles.

- Filtration time (minutes): **1 – 9999**

DATA ENTRY - PROGRAM - DAY END MAINT.

MAINTENANCE FILTRATION TIME 0000 Min

Main Back

**DAY-END** Maintenance filtration time.

DATA ENTRY - PROGRAM - DEGAS

DEGAS TIME 0000 Min 30% ▾

Main Back

**DEGAS** Degas time and ultrasonic power.

## Fill Bath

Select **Fill Bath** and press **Fill** to activate fill mode. **Stay on this screen** while filling — leaving it deactivates fill mode. Open the ball valve to fill, check the bath, and close the valve once the correct level is reached.

## Change Filter & Reset Counter

Press **Filter Change** to enter filter-change mode (stay on the screen, or the mode stops). The screen shows the running filter counter; the Supervisor can set the filter-change cycle target (**1 – 999999**) and press **Reset** to zero the counter after fitting new bags. See **Section 9** for the physical bag-change procedure.

## Drain Bath & Reset Counter

Press **Drain** to activate drain mode (stay on the screen, or it deactivates). A 60-second timer starts; shutdown mode follows once it elapses. The Supervisor can set the drain counter target (**1 – 999999**) and reset it.




### **Drain only below 40 °C**

Check that the bath temperature is **below 40 °C** before draining and opening the ball valve. Close the ball valve once drained and reset the counter.



**FILL BATH** Activate fill mode and open the ball valve.

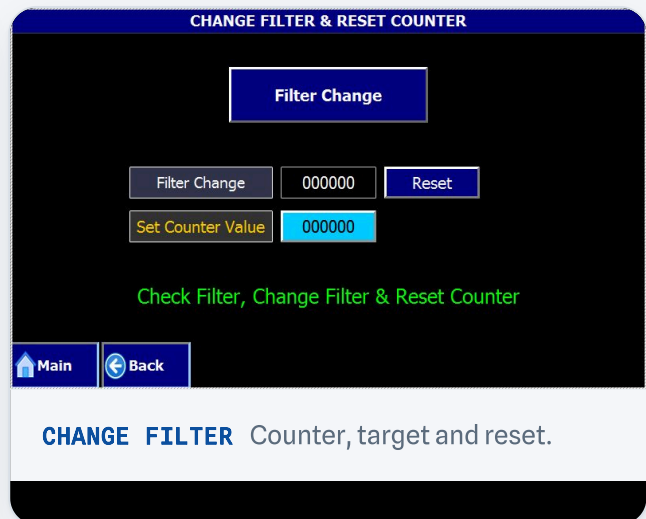

**CHANGE FILTER** Counter, target and reset.

## Shutdown & Wake-Up

The shutdown & wake-up process can be started from the maintenance screen, runs automatically after day-end maintenance, and runs on any enabled day once the machine's off-time is reached and the running cycle completes. A 30-second on-screen delay is shown first (it can be skipped by pressing the button again). When sleep time elapses the active program is deselected, the machine — including heating — switches off, and the user is logged off. At the next enabled wake-up time, heating restarts automatically to hold the set temperature and the home screen is shown so a cycle can be started. During sleep the screen prompts *"touch anywhere to wake up"*.

From **Shutdown and Wake-up Heating** the Supervisor configures idle heating:

- Enable / disable automatic shutdown & wake-up heating.
- Set start and stop times for each day of the week.
- Enable / disable each day individually.
- Shutdown & wake-up temperature: **10 – 80 °C**.

### **i** If all days are disabled

If every day is deselected and the shutdown & wake-up process is started, the system raises a warning on screen for the user to act on.



**SHUTDOWN & WAKE-UP** Sleep details and 30-second delay.


| Shutdown & Wakeup Heating Configuration |        |                     |             |        |
|-----------------------------------------|--------|---------------------|-------------|--------|
| 31-Dec-00 10:59:39 AM                   |        | Wakeup Heating      |             | No     |
| Day                                     | Enable | On Time             | Off Time    | Status |
| Sunday                                  | No     | 10:59:59 AM         | 10:59:59 AM |        |
| Monday                                  | No     | 10:59:59 AM         | 10:59:59 AM |        |
| Tuesday                                 | No     | 10:59:59 AM         | 10:59:59 AM |        |
| Wednesday                               | No     | 10:59:59 AM         | 10:59:59 AM |        |
| Thursday                                | No     | 10:59:59 AM         | 10:59:59 AM |        |
| Friday                                  | No     | 10:59:59 AM         | 10:59:59 AM |        |
| Saturday                                | No     | 10:59:59 AM         | 10:59:59 AM |        |
| Main Back                               |        | Test & Maint. Temp. |             | 000 °C |

**WAKE-UP HEATING** Per-day times, enable and idle set point.

## 5 STATUS & SUPERVISOR SCREENS

### Monitoring & Supervisor Functions

Press **System Status** from the maintenance screen to view live system status and the running operation on a mimic of the tanks, valves, heater, ultrasonics and filtration pump.

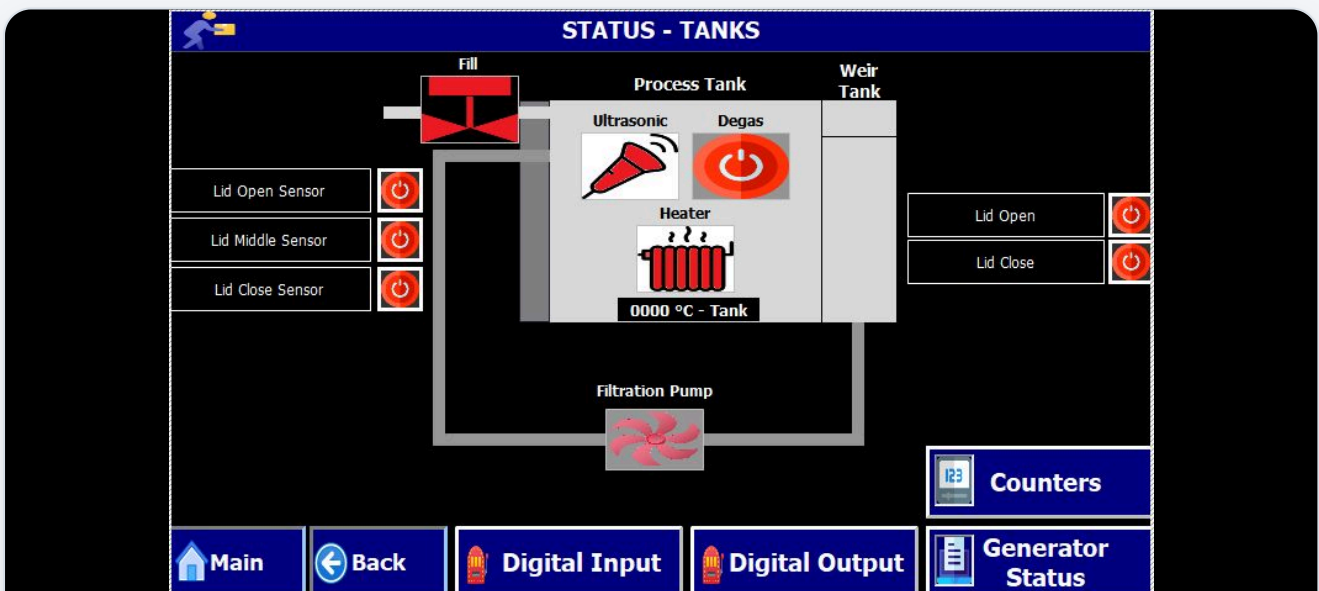

**STATUS – TANKS** Live mimic: fill valve, process & weir tanks, lid sensors, heater, ultrasonic, degas and filtration pump.

## Counters

From the status screen, **Counters** shows the cycle counters and lets the Supervisor reset the resettable ones:

- **Non-resettable** — continuous auto-cycle counter.
- **Resettable** — reset with the **RESET** key.
- **Heater hours of operation** — resettable.
- **Ultrasonic hours of operation** — resettable.
- Lid / heaters time-out (minutes): **1 – 999**.

## Digital Inputs & Outputs

**Digital Inputs** and **Digital Outputs** from the status screen show the live state of every PLC input and output — useful for fault-finding wiring and field devices.

| STATUS - DIGITAL INPUT       |  |                                     |  |                                         |  |
|------------------------------|--|-------------------------------------|--|-----------------------------------------|--|
| Emergency Switch<br>I0.0     |  | Process Tank Level Switch<br>I1.2   |  | Ultrasonic 9 Healthy Signal<br>I1.6     |  |
| System Reserve<br>I0.1       |  | Weir Tank Level Switch<br>I1.3      |  | Ultrasonic 10 Healthy Signal<br>I1.7    |  |
| Fault Reset Switch<br>I0.2   |  | Ultrasonic 1 Healthy Signal<br>I1.4 |  | Thermostat Input<br>I3.0                |  |
| Start Switch<br>I0.3         |  | Ultrasonic 2 Healthy Signal<br>I1.5 |  | Surge Arrestor<br>I3.1                  |  |
| Stop Switch<br>I0.4          |  | Ultrasonic 3 Healthy Signal<br>I2.0 |  | Heater Contactor Feedback<br>I3.2       |  |
| Lid Open Switch<br>I0.5      |  | Ultrasonic 4 Healthy Signal<br>I2.1 |  | MPCB Feedback of Pump & Motor -<br>I3.3 |  |
| Lid Close Switch<br>I0.6     |  | Ultrasonic 5 Healthy Signal<br>I2.2 |  | MPCB Feedback of Heater<br>I3.4         |  |
| Lid Interlock Switch<br>I0.7 |  | Ultrasonic 6 Healthy Signal<br>I2.3 |  | Lid Middle Sensor<br>I3.5               |  |
| Lid Open Sensor<br>I1.0      |  | Ultrasonic 7 Healthy Signal<br>I2.4 |  | Reserve Digital Input 2<br>I3.6         |  |
| Lid Close Sensor<br>I1.1     |  | Ultrasonic 8 Healthy Signal<br>I2.5 |  | Reserve Digital Input 1<br>I3.7         |  |

Main Back

**DIGITAL INPUTS** Live PLC input states.


| STATUS - DIGITAL OUTPUT          |  |                                           |  |                                           |  |
|----------------------------------|--|-------------------------------------------|--|-------------------------------------------|--|
| Lid Open<br>Q0.0                 |  | Lid Open Switch LED<br>Q1.1               |  | Ultrasonic Power Control<br>Ampl 2 - Q3.0 |  |
| Lid Close<br>Q0.1                |  | Lid Close Switch LED<br>Q2.0              |  | Ultrasonic Degas On<br>Q3.1               |  |
| Reserve Digital Output 7<br>Q0.2 |  | Lid Interlock Switch LED<br>Q2.1          |  | Reserve Digital Output 5<br>Q3.2          |  |
| Reserve Digital Output 6<br>Q0.3 |  | Green Lamp<br>Q2.2                        |  | Reserve Digital Output 4<br>Q3.3          |  |
| Filtration Pump<br>Q0.4          |  | Orange Lamp<br>Q2.3                       |  | Auto Fillup Valve<br>Q3.4                 |  |
| Heater<br>Q0.5                   |  | Red Lamp<br>Q2.4                          |  | Reserve Digital Output 3<br>Q3.5          |  |
| Ultrasonic On<br>Q0.6            |  | Buzzer<br>Q2.5                            |  | Reserve Digital Output 2<br>Q3.6          |  |
| Start Switch LED<br>Q0.7         |  | Ultrasonic Power Control<br>Ampl 0 - Q2.6 |  | Reserve Digital Output 1<br>Q3.7          |  |
| Stop Switch LED<br>Q1.0          |  | Ultrasonic Power Control<br>Ampl 1 - Q2.7 |  |                                           |  |

Main Back

**DIGITAL OUTPUTS** Live PLC output states.

## Generator Status & Bypass

**Generator Status** lets the Supervisor monitor the ultrasonic generators and, if needed, set each of up to ten generators to **In Use** or **Bypass**.

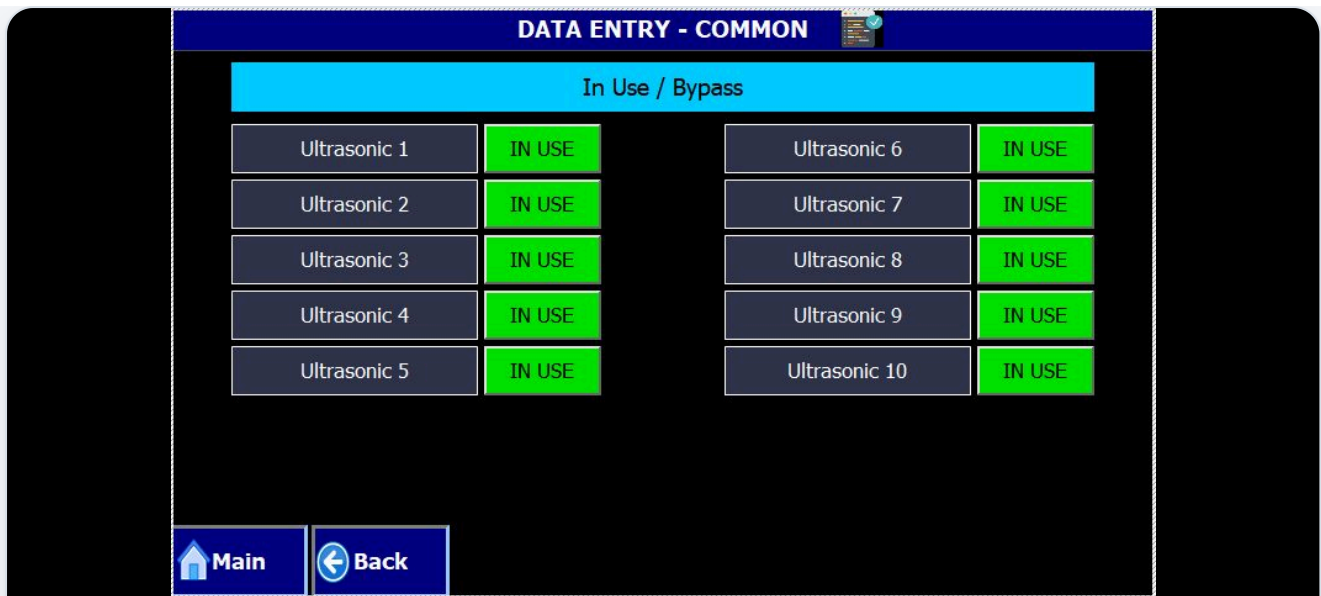


**GENERATOR BYPASS** Set ultrasonic generators 1–10 to In Use or Bypass.


## Supervisor / System Menu

Press the **Supervisor** key on the main screen to reach the system menu. From here:

- **Test** — manually operate and check individual components (see below).
- **Calibrate Screen** — calibrate the touch-panel response.
- **Clean Screen** — lock the touch panel temporarily so it can be wiped down.
- **Date & Time Settings** — set the MMI and PLC clock (requires the factory password).
- **Brightness Settings** — adjust the display brightness.

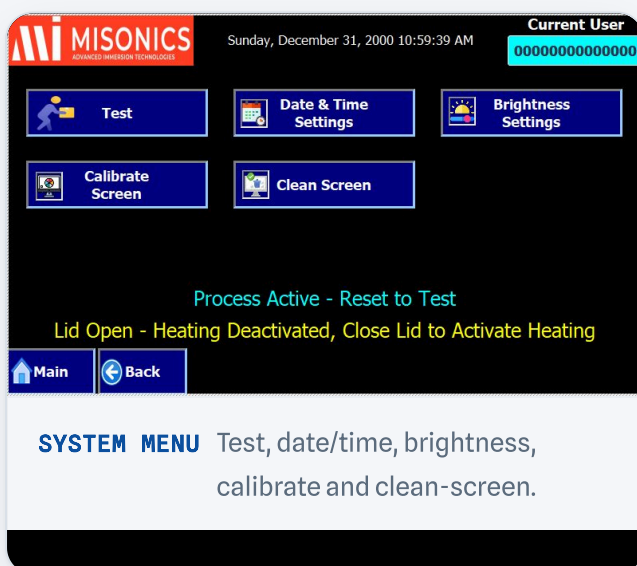

**SYSTEM MENU** Test, date/time, brightness, calibrate and clean-screen.

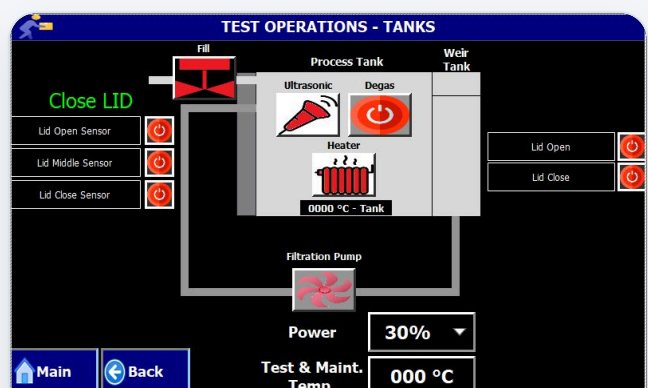

**TEST OPERATIONS** Manually fire each component; set test power and temperature.

Test / manual-operation ranges

| PARAMETER                           | RANGE    |
|-------------------------------------|----------|
| Ultrasonic power (%)                | 30 – 100 |
| Test & maintenance temperature (°C) | 10 – 80  |

6 PROCESS OVERVIEW

Running a Cleaning Cycle

The full sequence — from preparing the bath through to unloading clean parts — is summarised below. The operator handles the green and blue steps; the controller runs the cleaning cycle itself automatically.



## 1 PREPARE THE BATH

Fill & dose the bath  
water + detergent

Set temperature  
on the HMI

Degas — no load  
until cavitation is even

## 2 START THE CYCLE

Log in  
required level

Load basket,  
close lid

Select program  
1 – 4

Press Start  
physical switch

### ✓ START CONDITIONS — ALL MUST BE MET BEFORE THE CYCLE RUNS

✓ Process-tank  
level high

✓ Pump & heater  
feedbacks ON

✓ Temp ≤ set point,  
RTD healthy

✓ No surge-  
arrestor fault

all conditions met

## 3 AUTOMATIC CYCLE

the controller runs this automatically

Pre-filtration  
clears the bath

Ultrasonic clean  
at set power & temperature

Post-filtration  
polishes the bath

## 4 FINISH

Raise & drain basket  
let it drain over the tank

Unload  
ready for the next batch

**CYCLE FLOW** Setting up and running a cleaning cycle, end to end. Steps 1–2 and 4 are operator actions; the controller checks the start conditions, then runs the cleaning cycle (step 3) automatically. If any condition is not met the cycle will not start and an alarm is raised — see Section 8.

Before a process will run, the controller checks that the machine is in a safe and ready state. **All of the following conditions must be met:**

- The **process-tank level is high** — the resonators and heaters must be covered, or they can be damaged.
- All **heater and pump feedbacks are ON**.
- The liquid temperature is **not above the maximum set point** and there is **no RTD failure**.
- There is **no surge-arrestor fault**.

## Starting & Stopping a Cycle

- 1 **Select a program** on the program-selection screen.
- 2 Press the physical **Start** switch — the selected program then begins.



- 3 Monitor the **selected program and process** on the main screen as it runs.
- 4 Press the **Stop** switch to pause. Press **Start** again to resume from where it stopped, or **hold Stop for 3 seconds** to reset the process.



### **Never run the bath dry**

The low-level interlock prevents the heaters and ultrasonics running uncovered, but the bath level should still be checked before every start-up and topped up as it evaporates during use.

## 7 MACHINE STATUS

### Machine Status by Tower Lamp

The machine's state is shown by a three-colour tower lamp — **orange, green and red** — used in different patterns. The buzzer can be muted from the alarm screen and auto-mutes after 15 seconds.

#### RED LAMP & BUZZER



##### **Blinking fast (1 s) + buzzer**

A fault / alarm is present in the machine.



##### **Blinking slow (2 s) + buzzer**

A lid open / close operation is active.



##### **Blinking (1 s)**

Machine is idle.



##### **Blinking (2 s)**

Shutdown & wake-up mode is active.

#### GREEN LAMP



##### **On (steady)**

Machine cycle is active and the process is running.



##### **Blinking (1 s)**

System is ready to start a cycle.



##### **Blinking (2 s)**

Wake-up heating selected & active at full capacity; machine idle.

## ORANGE LAMP

- **On (steady)**  
Machine cycle is paused.
  - **Blinking (1 s)**  
System not ready to start, but a program is selected.
  - **Blinking (2 s)**  
Maintenance / test operation in progress (manual test, fill, filter change, drain), or wake-up heating selected but deactivated while idle.

## 8 ALARMS & TROUBLESHOOTING

## Alarms — Cause & Rectification

Press the **Alarms** key on the main or user screen to open the alarms screen, where active alarms are listed. **Buzzer Mute** silences the buzzer; **History** shows the log of past alarms.

[illegible]

**ALARMS** Active alarm list with buzzer mute and history.

[illegible]

**ALARMS HISTORY** Time-stamped log of triggered alarms.

## Clearing an alarm

To clear any active error you must press the **fault-reset switch** after rectifying the cause. The alarm will not clear until the underlying condition is fixed.

| ALARM                                                   | CAUSE & RECTIFICATION                                                                                                                                                                                             |
|---------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Emergency switch pressed</b>                         | Raised when the emergency switch is pressed; no component or mode operates while it is in. Release the switch to clear. If it persists after release, check the switch wiring.                                    |
| <b>Lid multiple input on</b>                            | Raised when more than one lid input is sensed at once. Check the lid sensor settings and the wiring of the lid inputs.                                                                                            |
| <b>MPCB F/B — pump / motor tripped</b>                  | Raised in all modes if a pump / motor MPCB is off or tripped. Switch all pump / motor MPCBs on; if it persists, check the feedback-signal wiring.                                                                 |
| <b>MCB F/B — heater tripped</b>                         | Raised when a heater MCB is off or tripped. Switch all heater MCBs on; if it persists, check the feedback-signal wiring.                                                                                          |
| <b>Temp. high / low — RTD</b>                           | Raised if the tank RTD temperature goes above the maximum set point. Check the actual temperature and the set point (set it correctly to avoid nuisance alarms); if it persists, check the RTD and heater wiring. |
| <b>Temp. high — thermostat</b>                          | Raised if the tank thermostat detects high temperature. Check the actual temperature, RTD, heaters and set points; if it persists, check the thermostat wiring.                                                   |
| <b>Heater contactor stuck</b>                           | Raised if the heater output is on but the contactor is not (or off but the contactor is not). Check the heater contactor operation; if it persists, check the contactor and feedback wiring.                      |
| <b>Process-tank liquid level low — heating disabled</b> | Raised if the tank level falls below the level switch (heating is disabled). Refill the tank to the level switch to re-enable heating; if it persists, check the level-switch wiring.                             |
| <b>Weir-tank liquid level low</b>                       | Raised if the weir-tank level falls below the level switch. Refill to the level switch; if it persists, check the level-switch wiring.                                                                            |
| <b>Ultrasonic X healthy signal faulty (X = 1–10)</b>    | Raised if a generator's healthy signal is off. Check whether that ultrasonic generator is on; if it is and the fault persists, check the healthy-signal wiring.                                                   |
| <b>Filter-change counter exceeded</b>                   | Raised when the filter-change counter exceeds its set value. Press fault-reset to clear for one cycle; reset the counter on the                                                                                   |

| ALARM                                      | CAUSE & RECTIFICATION                                                                                                                                                              |
|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                            | maintenance screen to clear fully. Check / change the filter bags (Section 9).                                                                                                     |
| <b>Drain counter exceeded</b>              | Raised when the drain counter exceeds its set value. Press fault-reset to clear for one cycle; reset the counter on the maintenance screen to clear fully.                         |
| <b>Lid not closed</b>                      | Raised if the process is running and the tank lid is not closed. Close the lid manually; if it is closed, check the lid-close sensor position and wiring.                          |
| <b>Lid not opening / not closing</b>       | Raised if the lid does not open / close within a fixed time. Check the lid motor, sensors and MPCB; if it persists, check the lid-motor wiring.                                    |
| <b>Surge-arrestor fault</b>                | Raised if the surge-arrestor input is not on. Measure / monitor the system voltage or check the wiring.                                                                            |
| <b>Auto fill-up on / liquid not filled</b> | Raised if the auto-fill valve is on but liquid is not filled within the set time. Set the fill time correctly; if it persists, check the fill valve, liquid flow and level switch. |

## Maintenance & Servicing

The ultrasonic cleaner must always be kept clean and dry. Carry out all work with the machine isolated unless a live check is specifically required.



### Disconnect the mains plug first

Switch off and disconnect the mains supply before any maintenance. Never allow chemical solution to contact the control or electrical components.

## Routine Maintenance

- Approximately every **6 months**, check the cleaner and blow accumulated dust away with dry compressed air.
- Make sure the generator cooling is always guaranteed — keep the cooling slots clear so air can circulate freely, and do not let warm air accumulate around the unit.
- Avoid scratches in the radiating (resonator) surface — scratches increase erosion due to cavitation.

## Changing the Filter Bags

The solution is filtered through two stainless bag-filter housings — a coarse **100 micron** bag followed by a fine **50 micron** bag. The bags are consumable items and must be replaced when they load up with soil. The on-screen **Change Filter** function and its counter (Section 4) help you track and carry out the change.

### **When to change the bags**

Replace the bags when the filter-housing pressure gauge climbs into its upper (red) zone, when the **Filter-Change Counter Exceeded** alarm appears, or when bath clarity and flow fall away. Clogged bags starve the circulation pump and let particulate recirculate onto cleaned parts.

### **Before opening a housing**

The solution may be hot and chemically active. Wear suitable gloves and eye protection, and where practical let the bath cool first. Isolate the machine before any electrical work, and never let solution reach the control or electrical components.

- 1** On the HMI, open **Maintenance → Change Filter & Reset Counter** and press **Filter Change** to enter filter-change mode — this stops the filtration pump. Stay on this screen for the duration of the change.
- 2** Close the inlet and outlet ball valves isolating the filter housings, then slowly relieve the pressure and drain each housing back to the tank.
- 3** Undo the housing lid (clamp / swing bolts), lift out the bag-restrainer basket and remove the used bag, letting it drain into the housing.
- 4** Clean the inside of the housing and the sealing face. Inspect the **Viton gasket / seal** and re-

place it if it is damaged or perished.

- 5 Fit a new bag of the correct rating in each housing — **coarse 100 micron** and **fine 50 micron** — seating it fully over the housing neck so that unfiltered solution cannot bypass it. Refit the restrainer basket.
- 6 Close the lid evenly with the seal correctly located, then reopen the inlet and outlet ball valves.
- 7 Exit filter-change mode and restart filtration. Check the housings and connections for leaks and confirm the pressure gauge returns to its normal (green) zone.
- 8 Press **Reset** on the Change Filter screen to zero the filter-change counter.
- 9 Dispose of the used bags in accordance with your site's waste procedures — they hold oils and contaminants removed from the parts.



#### **Never run without a sound bag**

Do not run the system with a missing, torn or incorrectly seated bag — unfiltered solution will bypass the filter and redeposit soil on cleaned parts.

## **Service**

If the unit no longer functions properly, first check the plug and operating elements. **Do not open the housing.** Repairs may only be carried out by suitably trained staff — inexpert intervention can result in considerable danger to users and to the equipment.

## **Warranty**

A one-year warranty is supplied by the manufacturer from the date of purchase, provided the equipment is operated in accordance with these operating instructions.

# Warning — Electrical Safety

 **Shock hazard**

To avoid shock hazard when troubleshooting the system, always disconnect the power-supply line cord from the receptacle and disconnect the power-supply cable going to the control panel. Under certain conditions dangerous potentials may exist when the equipment is off, due to charge retained by capacitors. Always discharge capacitors to ground before troubleshooting or servicing the equipment.

**10** MMI SCREEN REFERENCE

## Complete Touch-Panel Screen Map

Every screen of the EVOSONIC 1000 touch interface, for reference. See Sections 3–5 for how to navigate between them.

### MAIN & LOGIN



Sunday, December 31, 2000 10:59:39 AM

Current User

0000 °C - Tank

0000000000000000

Select Program



LID BYPASSED

SYSTEM IDLE

 Home

 Alarms

 Supervisor

**MAIN** Power-on home screen.



Sunday, December 31, 2000 10:59:39 AM

Current User

0000 °C - Tank

0000000000000000

Select Program

Program 1

Hold To Edit

Program 2

Hold To Edit

Program 3

Hold To Edit

Program 4

Hold To Edit

MAINTENANCE

Process Active - Reset to Edit


Lid Open - Heating Deactivated, Close Lid to Activate Heating

Close LID

 Main


 Back

**HOME** Program selection.

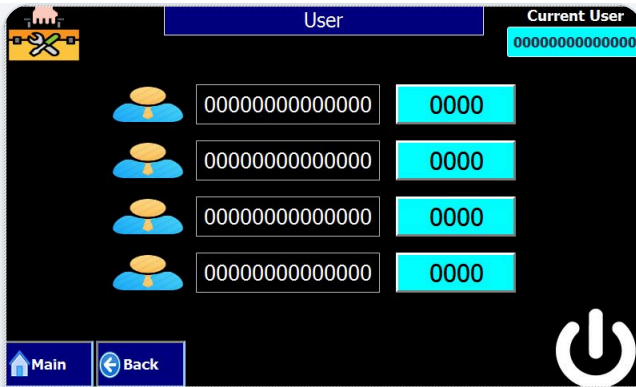

The screen is titled "User" and "Current User". It features a grid of four user entries, each with a user icon, a text field for the username (all containing "0000000000000000"), and a text field for the password (all containing "0000"). At the bottom left are "Main" and "Back" buttons. At the bottom right is a power button icon.


**LOGIN** Enter password.

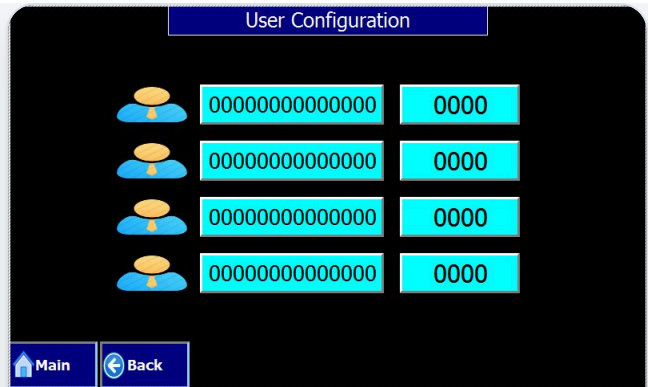

The screen is titled "User Configuration". It features a grid of four user entries, each with a user icon, a text field for the username (all containing "0000000000000000"), and a text field for the password (all containing "0000"). At the bottom left are "Main" and "Back" buttons.


**USER CONFIG** Supervisor: names & passwords.

## CLEANING PROGRAMS

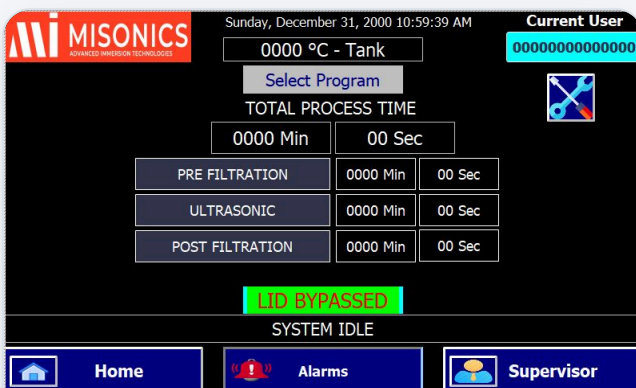

The screen shows the "MISONICS" logo and the date/time "Sunday, December 31, 2000 10:59:39 AM". It displays "0000 °C - Tank" and "Current User: 0000000000000000". A "Select Program" button is present. Below it, "TOTAL PROCESS TIME" is shown as "0000 Min" and "00 Sec". A table lists three programs: "PRE FILTRATION", "ULTRASONIC", and "POST FILTRATION", each with "0000 Min" and "00 Sec" values. A green bar indicates "LID BYPASSED". The status "SYSTEM IDLE" is at the bottom. Navigation buttons "Home", "Alarms", and "Supervisor" are at the bottom.

**PROGRAM SELECTED** Programs 1-4 (similar).

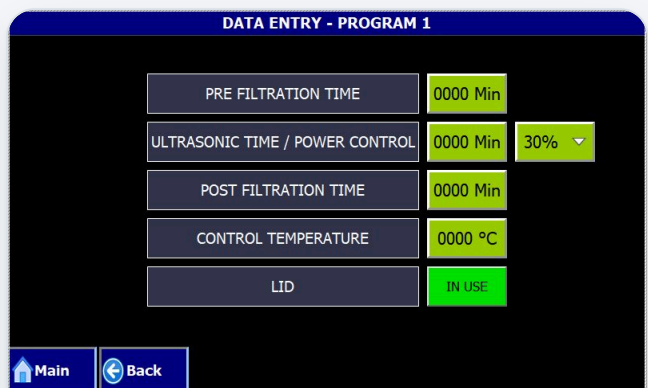

The screen is titled "DATA ENTRY - PROGRAM 1". It contains a table with the following settings: "PRE FILTRATION TIME" (0000 Min), "ULTRASONIC TIME / POWER CONTROL" (0000 Min, 30% dropdown), "POST FILTRATION TIME" (0000 Min), "CONTROL TEMPERATURE" (0000 °C), and "LID" (IN USE). Navigation buttons "Main" and "Back" are at the bottom left.


**DATA ENTRY** Program 1-4 (similar).

## MAINTENANCE PROGRAMS



The screen is titled "MAINTENANCE". It displays a grid of buttons: "Perform Day End Maint.", "Hold to Edit", "Fill Bath", "Shutdown & Wakeup", "Degas", "Hold To Edit", "Change Filter & Reset Counter", "System Status", "Filtration", "Hold To Edit", and "Drain Bath & Reset Counter". A green bar indicates "Process Active - Reset to Edit". At the bottom, it says "Close LID". Navigation buttons "Main" and "Back" are at the bottom left.

**MAINTENANCE** Function menu.

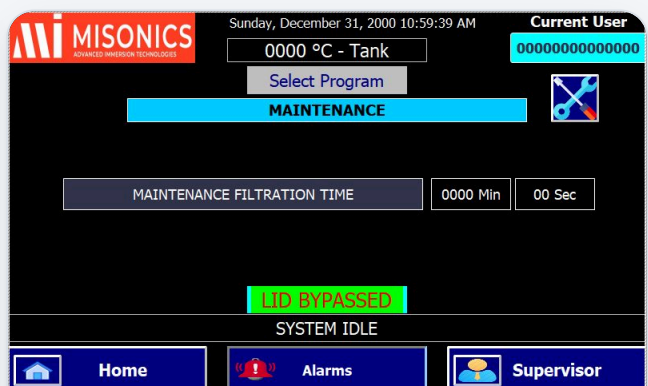

The screen shows the "MISONICS" logo and the date/time "Sunday, December 31, 2000 10:59:39 AM". It displays "0000 °C - Tank" and "Current User: 0000000000000000". A "Select Program" button is present. Below it, a blue bar indicates "MAINTENANCE". A table shows "MAINTENANCE FILTRATION TIME" as "0000 Min" and "00 Sec". A green bar indicates "LID BYPASSED". The status "SYSTEM IDLE" is at the bottom. Navigation buttons "Home", "Alarms", and "Supervisor" are at the bottom.

**DAY-END** Selected.



MISONICS  
ADVANCED WATERSHED TECHNOLOGIES

Sunday, December 31, 2000 10:59:39 AM

Current User

0000 °C - Tank

0000000000000000

Select Program

DEGAS TIME

0000 Min

00 Sec

LID BYPASSED

SYSTEM IDLE

Home

Alarms

Supervisor

DEGAS Selected.

MISONICS  
ADVANCED WATERSHED TECHNOLOGIES

Sunday, December 31, 2000 10:59:39 AM

Current User

0000 °C - Tank

0000000000000000

Select Program

FILTRATION TIME

0000 Min

00 Sec

LID BYPASSED

SYSTEM IDLE

Home

Alarms

Supervisor

FILTRATION Selected.

DATA ENTRY - PROGRAM - DAY END MAINT.

MAINTENANCE FILTRATION TIME

0000 Min

Main

Back

DATA ENTRY Day-end.

DATA ENTRY - PROGRAM - DEGAS

DEGAS TIME

0000 Min

30%

Main

Back

DATA ENTRY Degas.

DATA ENTRY - PROGRAM - FILTRATION

FILTRATION TIME

0000 Min

Main

Back

DATA ENTRY Filtration.

FILL BATH

Fill

Process Tank Level Switch  
11.2

Weir Tank Level Switch  
11.3

Check Bath, Open Ball Valve to Fill & Close Ball Valve Once Filled

Main

Back

FILL BATH

CHANGE FILTER & RESET COUNTER

Filter Change

Filter Change

000000

Reset

Set Counter Value

000000

Check Filter, Change Filter & Reset Counter

Main

Back

CHANGE FILTER & reset counter.

DRAIN BATH & RESET COUNTER

Drain

Bath Drain

000000

Reset

Set Counter Value

000000

0000 °C - Tank

Check Bath Temperature is Below 40 °C Before Draining & Opening Ball Valve;  
Close Ball Valve Once Drained & Reset Counter  
Shutdown Mode Will Get Activated By : 00 Sec

Main

Back

DRAIN BATH & reset counter.

SHUTDOWN & WAKE-UP

SHUTDOWN & WAKEUP

Current User

0000000000000000

Sunday, December 31, 2000 10:59:39 AM

Shutdown & Wakeup

Current Machine Status

Wake Mode : Active

Set Temp. : 000 °C

Heaters Status : Off

Wakeup Time : Sunday 10:59:59 AM

Screen Sleep Timer : 00 Sec

Main

Back

Close LID

SHUTDOWN & WAKE-UP

0000 °C - Tank

Sunday, December 31, 2000 10:59:39 AM

Shutdown & Wakeup

Sleep Mode On

Touch Screen to Wakeup

Check Bath Temperature is Below 40 °C Before Draining & Opening Ball Valve as/if Required

SLEEP ACTIVE Touch to wake.

Shutdown & Wakeup Heating Configuration

31-Dec-00 10:59:39 AM

Wakeup Heating

No

| Day       | Enable | On Time     | Off Time    | Status |
|-----------|--------|-------------|-------------|--------|
| Sunday    | No     | 10:59:59 AM | 10:59:59 AM |        |
| Monday    | No     | 10:59:59 AM | 10:59:59 AM |        |
| Tuesday   | No     | 10:59:59 AM | 10:59:59 AM |        |
| Wednesday | No     | 10:59:59 AM | 10:59:59 AM |        |
| Thursday  | No     | 10:59:59 AM | 10:59:59 AM |        |
| Friday    | No     | 10:59:59 AM | 10:59:59 AM |        |
| Saturday  | No     | 10:59:59 AM | 10:59:59 AM |        |

Main

Back

Test & Maint. Temp. 000 °C

WAKE-UP HEATING Per-day config.

STATUS & COUNTERS

STATUS - TANKS

Fill

Process Tank

Weir Tank

Lid Open Sensor

Lid Middle Sensor

Lid Close Sensor

Ultrasonic

Degas

Heater

0000 °C - Tank

Filtration Pump

Lid Open

Lid Close

Counters

Main

Back

Digital Input

Digital Output

Generator Status

STATUS – TANKS Live mimic.

CYCLE COUNTERS

Non Resettable

000000

Resettable

000000

Reset

Heaters

Hours of Operation

000000

Reset

Lid/Heaters

Time Out

000 Min

Ultrasonic

Hours of Operation

00000

Ultrasonic Service Required

Main

Back

COUNTERS Cycle & hours counters.





## Technical Drawings & Lists (PDF Downloads)

The machine's reference drawings and lists are provided here as separate PDFs. Click any item to open or save it.



### Electrical Schematic — Sheet 1

Power & control schematic · 112 KB



### Electrical Schematic — Sheet 2

Power & control schematic · 111 KB



### PLC I/O List

Digital & analog I/O map · 43 KB



### Process Diagram

Process flow diagram · 268 KB



### General Assembly Drawing

General arrangement (GA) · 13 MB



### Recommended Spare Parts

Parts list & codes · 82 KB



## KLEENTEK.

### Kleentek Australia

Industrial ultrasonic & chemical cleaning systems

47 Foley Road, Hemmant, QLD 4174

1300 79 73 79 · [info@kleentek.com.au](mailto:info@kleentek.com.au)

### About this manual

Operating Instructions & Service Manual for the EVOSONIC 1000 (model EVS 950) ultrasonic cleaning system. Supplied and supported by Kleentek Australia.

All rights reserved in respect of changes of design and technical data. Specifications may be modified without notice.